

BOSTITCH® MODEL B8 STAPLER Loading Instructions

PRESS DOWN HERE AND

1



SLIDE CATCH BACK

2



SWING TOP OPEN

3



PULL PUSHER BACK AND HOLD

4



INSERT STRIP of BOSTITCH SB8 staples (or half strip of BOSTITCH STCr2115 1/4" staples) inserting end toward front of machine first. See sketch.

5

LET PUSHER MOVE FORWARD against staples



6

CLOSE TOP by pressing it down against the base, as when driving a staple. Top will be latched automatically and the machine is ready to use.

TO CLEAR JAM:

Insert the tip of a B8 Staple Remover or Screwdriver over the top front corner of the chrome plated magazine (where it is turned around in front of the black driver) and pry the driver lever and magazine apart.

— NOTE —

When freeing a jam, do not allow the tip of the Staple Remover or Screwdriver to be inserted under the top front portion of the driver which is riveted to the driver lever, as this would probably result in breakage to the tip of the tool.

TO REMOVE FROM PLASTIC BASE



... for use as a stapling plier, a tackler, or to get blade under close-lying material, or for carrying in the pocket:—

Swing top open, at right angle to base. Hold base firmly on desk and twist top sideways.

Caution: Keep fingers away from staple discharge area.



TO ATTACH STAPLE REMOVER (on model B8R)

Remove machine from plastic base. Lay flat arm of remover in groove across base, remover blade toward the rear, flat side down. Press down into groove and replace machine on base.



TO REMOVE STAPLES (with model B8R)
Slide remover blade under staple and push. Do not lift or twist. With thin paper, hold finger on staple while you push.



TO LOCK

To carry in pocket: squeeze top down against the base tightly and push catch back towards hinge.

TO UNLOCK

Squeeze top down against the base tightly and push catch towards knob.

— CAUTION —

To avoid mishaps, when handling any stapling machine the fingers should be kept clear of the channel through which the staple is driven. The driving action of the BOSTITCH B8 is so powerful and so quick that special caution should be observed.

The Bostitch Guarantee

This Bostitch machine is guaranteed against defective materials or workmanship for one year from date of purchase, and if defective, will be replaced or repaired without charge within the terms of this guarantee. This guarantee is effective only if the machine is used with genuine Bostitch staples or equivalent of the size designated. Repairs made necessary by abuse, normal wear and service, or from the use of improper staples, will be made at a nominal charge for labor, replacement parts, return postage and insurance. Bostitch products being returned under the guarantee should be forwarded prepaid to Bostitch Division of Textron Inc., Briggs Drive, East Greenwich, Rhode Island 02818. or to your nearest Bostitch sales/service office.

BOSTITCH
DIVISION OF TEXTRON INC.
EAST GREENWICH, R. I.